

INSTALLATION INSTRUCTION

※ ACCESSORIES CHECKING


LIST OF THE STANDARD ACCESSORIES:

Please double-check the accessory list hereinafter and contact our company or our distributor for any unconformity.

Remarks:



1. Without affecting their performing, accessories may be changed without further notice;
2. Drawings for reference only, product size & shape refer to actual.

Accessories list		
No.	Name	Qty
1	Main body	1
2	Flange	2
3	Plastic	2
4	Screw	1
5	Index	1
6	Handwheel	2
7	Spout	1

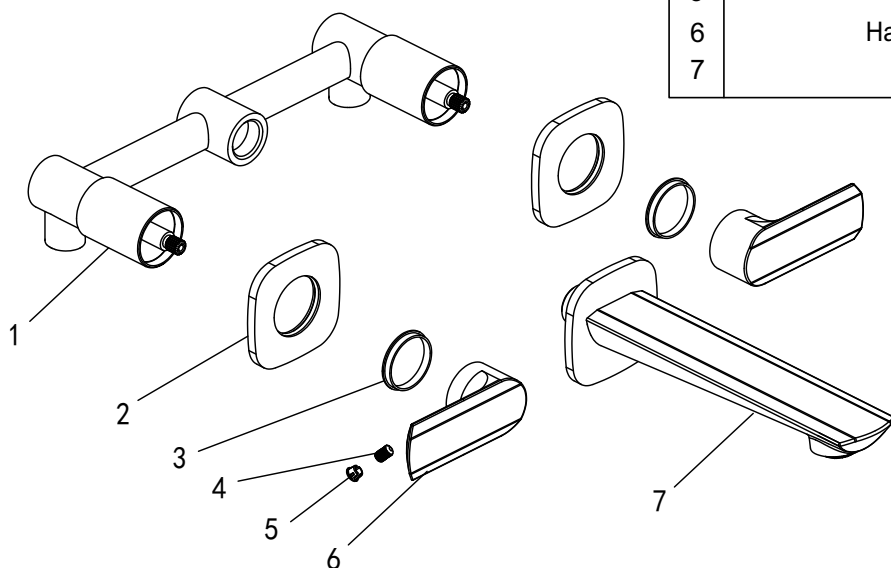


※ Installation Instructions

- ☆ Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory;
- ☆ To avoid the faucet from jamming, do flush the water pipe before installation;
- ☆ After installation, make sure every joint safely sealed & no leaking;
- ☆ Using condition: Working pressure at 0.05-1.0MPa(including cold & hot water pressure), with applicable water temperature: 4°C-90°C;
- ☆ Make sure to connect the hot/cold inlet pipe correctly, if standing in front, hot water pipe connecting to the left & cold water pipe connecting to the right.

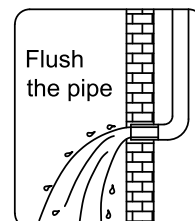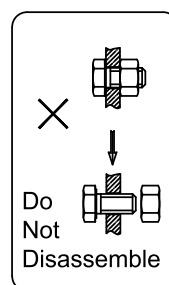


✕ Installation Procedures

- ☆ Make sure the installation holes to be in right size;
- ☆ Connect the main body & water supply pipe with water inlet pipe.

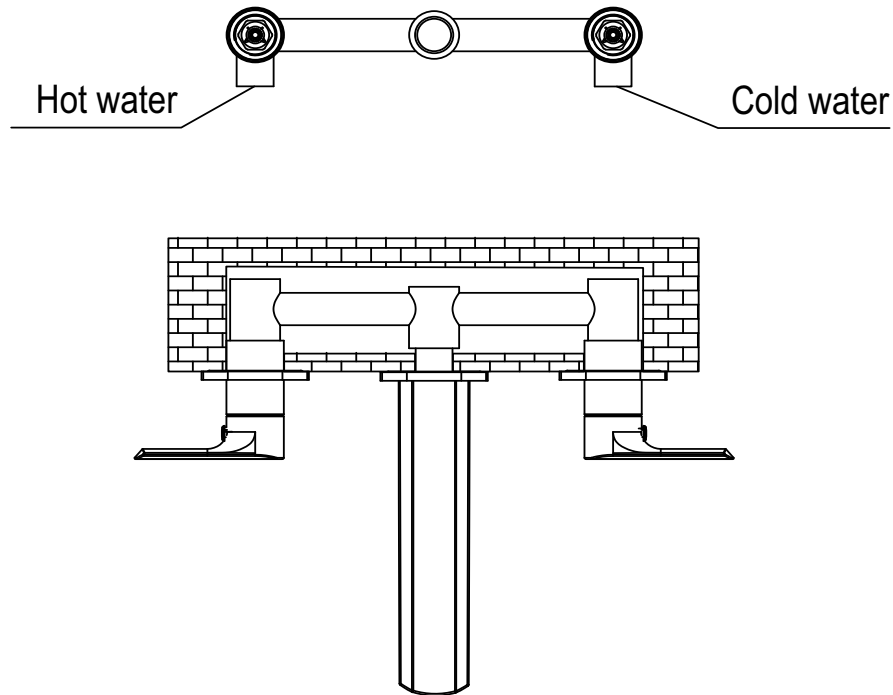

✕ Usage

- ☆ How to operate the handle
 1. Left handle: Turn counterclockwise to increase hot water flow;
 2. Right handle: turn clockwise to increase cold water flow.

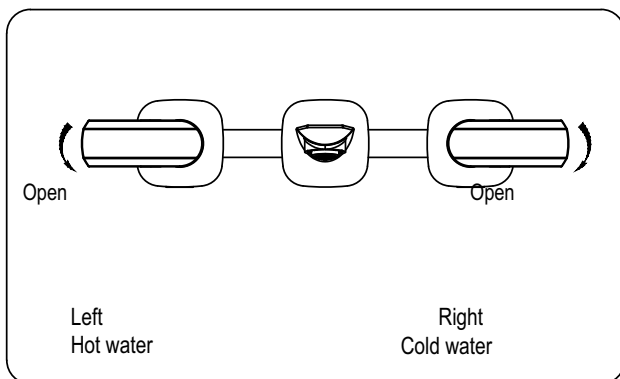

✕ Cleaning & Maintenance

- ☆ To keep the product clean & shining, follow as below:
 1. Flush with clean water & dry with soft cloth only;
 2. If any dirt, clean with soft liquid or transparent glass detergent;
 3. Do not use any scrubbing detergent, polisher, sane-cloth, paper tissue or scraper;
 4. Do not use acid detergent, insoluble grain-like detergent or soap;
 5. Circumrotate the aerator o ffand clean it when necessary.

