

SWAROVSKI ETERNAL 01 4705 Built in Bath Shower-Combination

INSTALLATION INSTRUCTION


XACCESSORIES CHECKING

LIST OF THE STANDARD ACCESSORIES:

Please double-check the accessory list hereinafter and contact our company or our distributor for any unconformity.

Remarks:


- 1. Without affecting their performancing, accessories may be changed without further notice;
- 2.Drawings for reference only, product size & shape refer to actual.

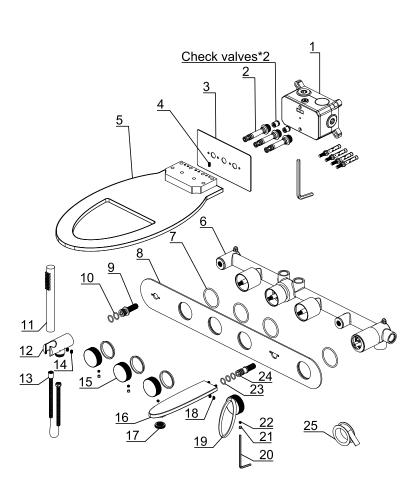



Accessories list		
No.	Name	Qty
1	Main body A	1
2	Connector	3
2 3 4	Plate	1
4	Screw	6
5	Shower head	1
6	Main body B	1
7	O-ring	3
8	Plate	1
9	Connector	1 2 1
10	O-ring	2
11	Hand shower	
12	Shower holder	1
13	Shower flexible hose	1
14	Screw	1
15	Divertor handle	3
16	Spout	1
17	Aerator	1
18	Screw	2
19	Handle	1
20	Allen key	1
21	Index	4
22	Screw	4
23	O-ring	
24	Connector	3 1
25	Thread sealing	1


Installation Instructions


- ☆ Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory;
- ☆ To avoid the faucet from jamming, do flush the water pipe before installation;
- ☆ After installation, make sure every joint safely sealed & no leaking;
- ☆ Using condition: Working pressure at 0.05-1.0MPa(including cold & hot water pressure), with applicable water temperature: 4°C-90°C;
- ☆ Make sure to connect the hot/cold inlet pipe correctly, if standing in front, hot water pipe connecting to the left & cold water pipe connecting to the right.







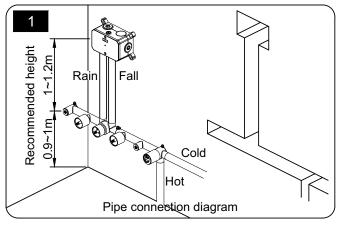


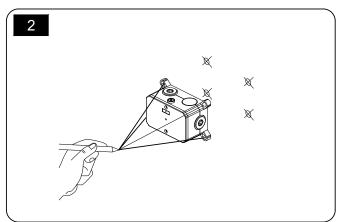


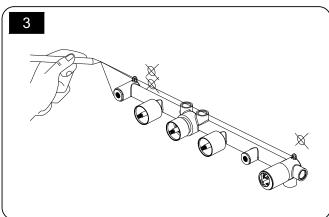


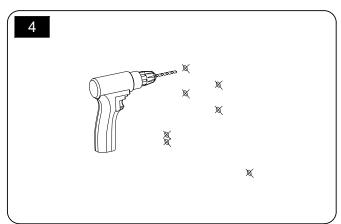


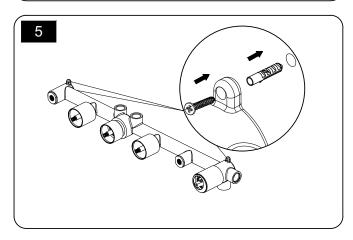

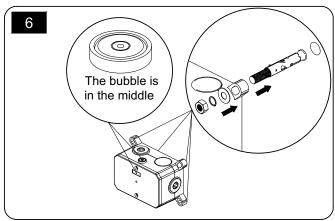

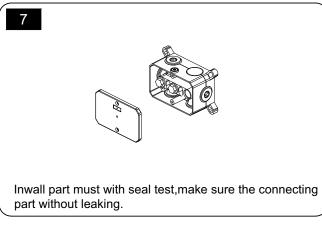


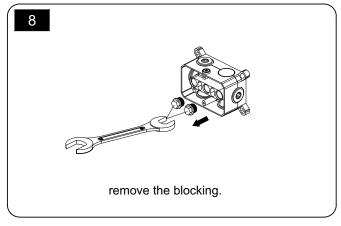

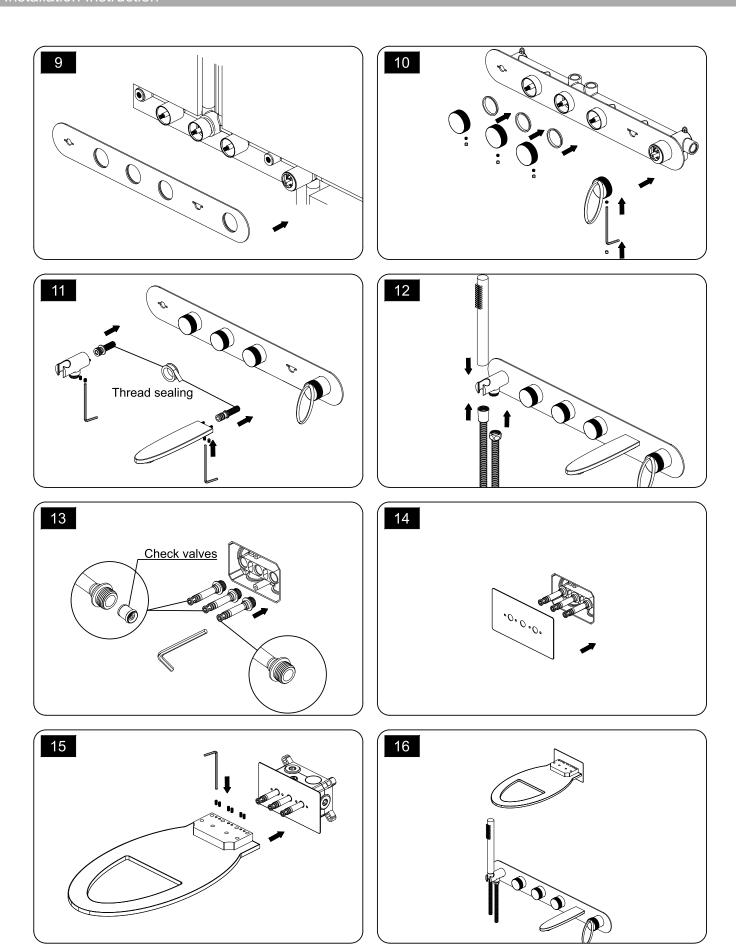


XUsage

☆How to operate the handle

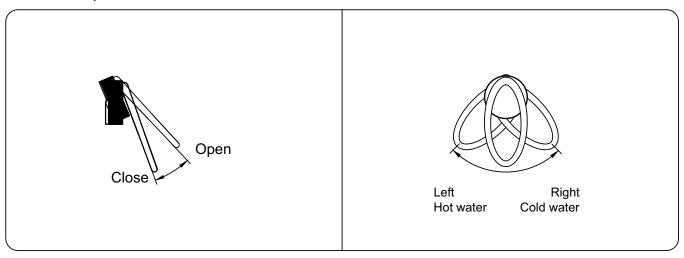

☆ How to operate the Divertor handle

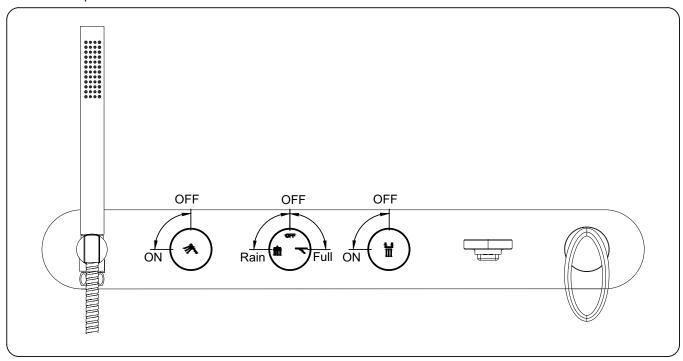

※ Cleaning & Maintenance

- ☆ To keep the product clean & shining, follow as below:
 - 1.Flush with clean water & dry with soft cloth only;
 - 2.If any dirt, clean with soft liquid or transparent glass detergent;
 - 3.Do not use any scrubbing detergent, polisher, sane-cloth, paper tissue or scraper;
 - 4.Do not use acid detergent, insoluble grain-like detergent or soap;
 - 5. Circumrotate the aerator o ffand clean it when necessary.

